


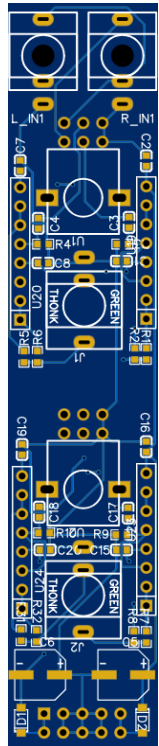

2ZAParty BOM



2x green stereo thonkicons



2x mono thonkicons



2x dual gang alpha pot A50k



4x NJM4556AL



1x 2x5 male pinheader

and your favorite knobs & nuts

BUILDORDER

Step 1

First up are the opamps - these are soldered directly to the board for clearance.
Make sure they are placed correctly and straight (DOT = SQUARE HOLE)

Step 2

Solder the pinheader in place (backside of the PCB)

Step 3

Place the thonkiconns green and mono together with the pots
DO NOT SOLDER YET! Place the front and thighten the thonkiconns
Make sure every component is place.

Step 4

Solder the thonkiconns and pots.

Step 5

Install your favorite knobs & nuts and you are done!
Connect your powercable and screw the module in.

MODUS operandi

L + R inputs

The left input (L) is normalised to the right input (R).
So audio will be duplicated if only L is used.

Stereo Out

These are stereo outputs - connect your headset here.
Dial in your desired volume and listen to your creations.

DISCLAIMER

Voltage vibes cannot be held accounted for any misuse of the module
or incorrect installation of the DIY Kit